

6 Grab Rails & Hand Rails

6.1 General

In corridors accessed by patients, a grab rail/ hand rail is required on both sides of the corridor.

To be effective, hand rails suitable for patients and people with disabilities must be within the design criteria set out as follows:

- Clearance of the top arc of 270° is to be achieved throughout the full length of the handrail
- Rail ends should return to the wall or floor
- Hand rails should have eased edges and corners
- Handrails are to be 30 – 50mm in diameter spaced 50mm from the support wall or balustrade. Where an elliptical handrail is used the horizontal dimension must be the larger
- Ends of handrails at the bottom of stairs and ramps extend beyond the last riser for the depth of one tread and ends of the ramp or top riser and then horizontally for at least 300mm (Refer to Figure 6.5 below).

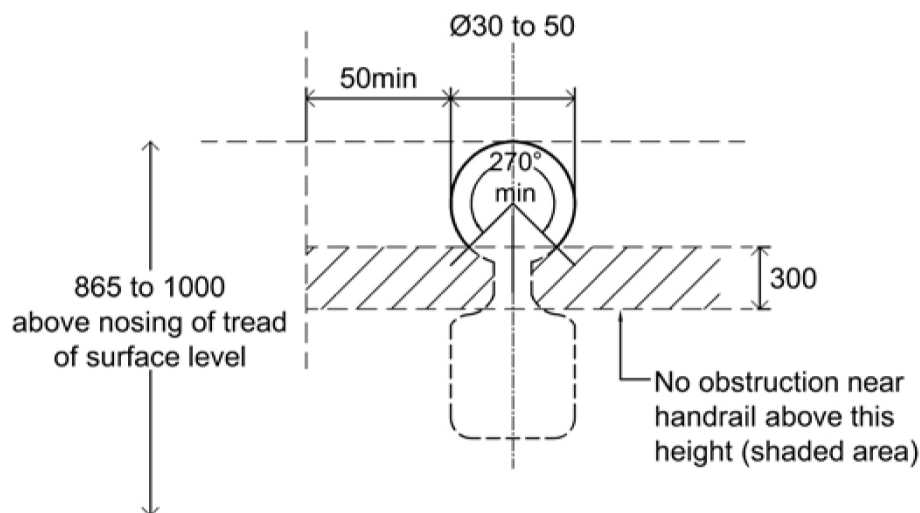


Figure 6.1: Section through handrail showing clearances

Compliant handrail installations and mounting brackets are demonstrated in the figure below.



Figure 6.2: Compliant handrail examples

Non compliant hand rails examples are demonstrated in the figures below showing inadequate clearances, inappropriate width and profile and rails that do not return to the wall.



Figure 6.3 Non-compliant handrail examples

The following hand rail examples are compliant but not recommended. The downward projection of the mounting bracket could be a hazard to unstable users.



Figure 6.4: Compliant but not recommended hand rail mounting brackets

The ends of hand rails are terminated by returning to a side wall as demonstrated in the figure below. Alternatively, rails may return downwards onto a post or return back 180° on themselves.



Figure 6.5: Stair hand rail with return to the wall



Figure 6.6: Rail extends beyond the stair.

Prevention of Self Harm

In certain areas such as Mental Health Units, grab rails may present the possibility of self-harm by providing points of ligature.

Depending on the Operational Policy, corridor handrails in Mental Health Units should be designed in such a way that the space between the base of the hand rail profile and the wall is blocked. This arrangement does not totally eliminate the ligature point, but it makes it impossible to tie an object around the rail.

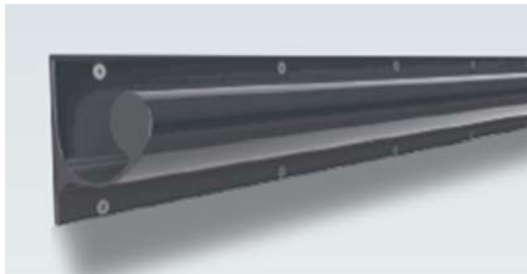


Figure 6.7: Anti-ligature corridor handrails



Figure 6.8: Anti-ligature shower grabrail

Outside Corners

Handrails meeting outside wall corners should be either continuous around the corner or set back from the corners by approximately 100mm. This is to minimise the chance of the rail grabbing onto clothing, especially large pockets. Any handrails continuing around 90 degree corners should be rounded to avoid a dangerous sharp edge.



The International Health Facility Guidelines recommends the use of HFBS “Health Facility Briefing System” to edit all room data sheet information for your project.

HFBS provides edit access to all iHFG standard rooms, and departments, and more than 100 custom report templates.

HFBS Health Facility Briefing System



Briefing Module

The Health Facility Briefing System (HFBS) has numerous modules available via annual subscription. It suits healthcare Architects, Medical Planners, Equipment Planners Project Managers and Health Authorities.

Use the HFBS Briefing Module to quickly drag in health facility departments or pre-configured room templates from the iHFG standard, edit the room features such as finishes, furniture, fittings, fixtures, medical equipment, engineering services. The system can print or download as PDF more than 100 custom reports including room data sheets, schedules, and more...

To learn more about the HFBS web-based Healthcare Briefing and Design Software and to obtain editable versions of the “Standard Components” including Room Data Sheets (RDS) and Room Layout Sheets (RLS) offered on the iHFG website, signup for HFBS using the link below.

Get Started Now:
hfbs.healthdesign.com.au

- ✓ iHFG Room Data Sheets and Departments are instantly editable in the HFBS software available online.
- ✓ You can access hundreds of report templates to print your iHFG room data in HFBS.
- ✓ HFBS has a onetime free 3 day trial available to all new users.

Get Started Now:
hfbs.healthdesign.com.au



HFBS

Health Facility Briefing System

hfbsinfo.com | techsupport@healthdesign.com.au